

APERTURE ADAPTOR

INSTALLATION INSTRUCTIONS



WARNING:

- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- Make sure all electrical power is turned off while installing the fixture.
- This luminaire must be adequately grounded for protection against shock hazards and to assure proper operation.
- Disconnect power before servicing.
- LEDs are ESD (Electro Static Discharge) sensitive devices that can be easily damaged if the proper ESD mitigating steps are not taken.
- LEDs are very sensitive to mechanical damage. Caution must be taken to avoid damage to the LEDs.
- ESD or mechanical damage voids all warranties.

FOR USE WITH REMODEL DOWNLIGHTS:

- 4AR
- 4DR
- 4DS
- 4PR
- 4PS
- 6AR
- 6DR
- 6DS
- 6PR
- 6PS
- 8DR

ORDERING INFO


ORDERING EXAMPLE: 4DR - GR - 0575 - WHT			
SERIES	CATALOG NUMBER	CEILING CUTOUT	FINISH
4AR 6AR	GR	Specify ceiling cutout in 1/8" increments. Example: 5.75" = 0575	CS Clear semi-specular powder coat
4DR 6DR			WH White texture powder coat
4DS 6DS			BL Black texture powder coat
4PR 6PR			
4PS 6PS			
8DR			

Additional finishes available, consult factory.

KIT COMPONENTS

TYPE 1 APERTURE ADAPTOR: NON-ALIGNING FOR SMALLER CEILING CUTOUTS


NOTE: Since there are no alignment features in the trim ring, it is the installer's responsibility to properly center the fixture within the cutout.

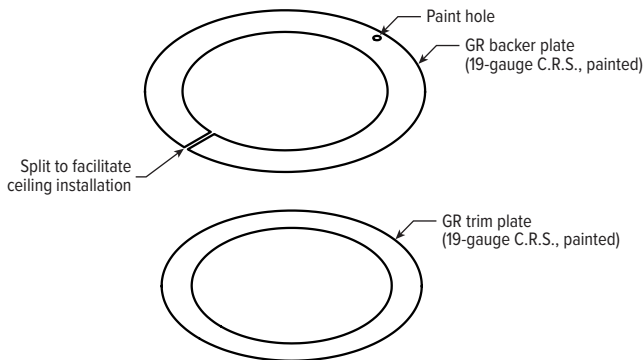

APPLICATION LIMITS	
DOWNLIGHT SIZE	RECOMMENDED LIMITS
4"	5-1/8" – 5-3/4"
6"	6-5/8" – 7-1/4"
8"	9-1/8" – 9-7/8"

- Round and square form factors are driven by fixture base.
- Recommended ceiling thickness range: 3/8" – 1-1/4"

TYPE 2 APERTURE ADAPTOR: SELF-ALIGNING FOR LARGER CEILING CUTOUTS

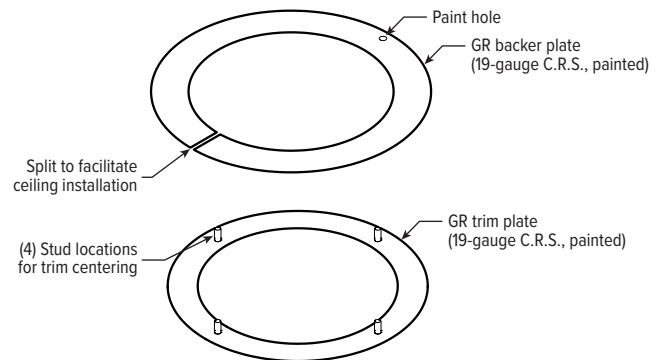

APPLICATION LIMITS	
DOWNLIGHT SIZE	RECOMMENDED LIMITS
4"	5-7/8" – 9"
6"	7-3/8" – 11-1/2"
8"	10" – 14-1/4"

- Round and square form factors are driven by fixture base.
- Recommended ceiling thickness range: 3/8" – 1-1/4"
- Applications that fall beyond these ranges may be possible, consult factory.

APERTURE ADAPTOR


INSTALLATION INSTRUCTIONS

INSTALLATION

STEP 1: Insert backer plate.

- A. Maneuver up through the ceiling cutout (as shown below).

FIG 1.A.1

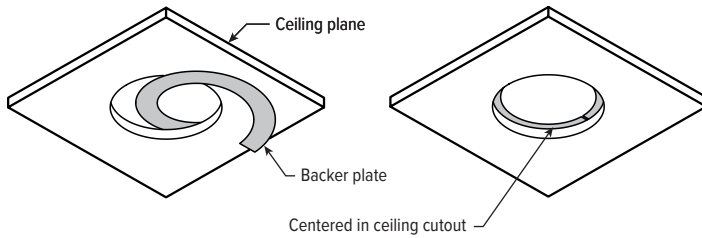


- B. Visually center the "backer plate" within the ceiling cutout.

STEP 2: Install downlight with adaptor.

- A. Slide aperture adaptor ring down over the top of the downlight insert, until it rests upon the (4) stop tabs.
- B. Maneuver the downlight insert up through the "backer plate"; then install as usual.

FIG 2.B.1

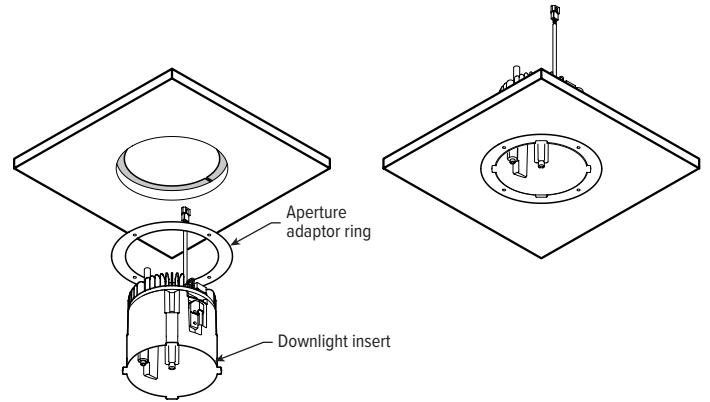

NOTE: Swing-out arms bare down against the backer plate. Downlight inserts that use push-thru clips can also be installed using this kit.

